## HELICOIL<sup>®</sup> manual installation tool

The H-PMG manual installation tool allows an easy installation of HELICOIL<sup>®</sup> Classic and HELICOIL<sup>®</sup> Plus thread inserts. The tool features a leader cartridge, a pitch-controlled threaded mandrel and a depth stop and fits UNF threads (American National fine thread).

## Note:

Only required for HELICOIL<sup>®</sup> Plus for fine screw threads and special applications. As an alternative, a HELICOIL<sup>®</sup> Plus installation mandrel can be used.

## **Properties:**

- Smooth mandrel
- Pitch-controlled
- With depth stop
- With leader cartridge
- For HELICOIL® Classic, HELICOIL® Plus Free Running and HELICOIL® Plus Screwlock

Technical information can be found on the last page.

2


Diameter	Article number	Pitch	Nominal length
(d)		(P)	t <sub>2</sub>
UNF 9/16"-18	01500280700	1.41	14.3
UNF 5/8"-18	01500281700	1.41	15.9
UNF 3/4"-16	01500283700	1.59	19.1
UNF 7/8"-14	01500285700	1.81	22.2
UNF 1"-12	01500286700	1.81	25.4
UNF 1 1/8"-12	01500287700	2.12	28.6
UNF 1 1/4"-12	01500288700	2.12	31.8
UNF 1 3/8"-12	01500289700	2.12	34.9
UNF 1 1/2"-12	01500290700	2.12	38.1




Böllhoff Group · Archimedesstr. 1-4 · 33649 Bielefeld · Phone: +49 521 4482-1387 · fat@boellhoff.com · eshop.boellhoff.de/en/home

This document was generated automatically. Subject to technical changes and errors. Distribution as well as duplication of this document, its utilisation and communication of its content only permitted with express consert.

## HELICOIL® Plus thread inserts

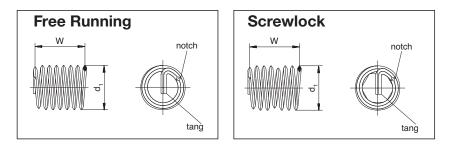

W and  $d_1$  are the control values for thread inserts (Free Running and Screwlock) before they have been installed. The length can only be measured for installed thread inserts.

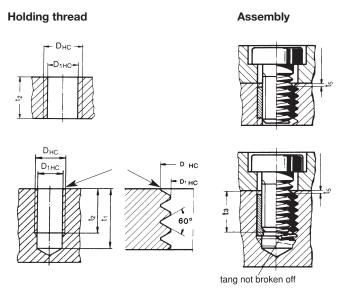

Prior to tapping, counter-bore 90° and deburr. Outside diameter of **countersink** =  $D_{HC}$  + 0.1 mm.

- d = Nominal thread diameter
- P = Thread pitch
- $d_1 \quad = \begin{array}{l} \text{Outside diameter of thread insert prior to installation} \\ \end{array}$
- W = Number of threads prior to installation
- $D_{HC}$  = Outside diameter of the parent thread
- $D_{1HC}$  = Crest diameter
  - = Suitable twist drill diameter. Please note:  $D_{1HC}$  is critical for selecting the correct twist drill diameter.
- $t_1$  = Minimum depth of tapped hole according to DIN 76 Part 1 (guide value)
  - = The nominal length of the thread insert corresponds to the minimum length of the full parent thread for blind holes or the minimum plate thickness for a through hole.
  - = Maximum screw-in depth when the tang is not removed
  - Distance of the thread insert from the joint face = 0.25 to 0.5 P, if t<sub>2</sub> corresponds to the abovementioned minimum value

When you use HELICOIL® Plus thread inserts for volume production, we recommend to add at least 1 x P to values  $t_1$  and  $t_2.$ 

t<sub>2</sub>

t3

 $t_5$ 



В

Böllhoff Group · Archimedesstr. 1-4 · 33649 Bielefeld · Phone: +49 521 4482-1387 · fat@boellhoff.com · eshop.boellhoff.de/en/home

This document was generated automatically. Subject to technical changes and errors. Distribution as well as duplication of this document, its utilisation and communication of its content only permitted with express consert.